



ALWAYS GOOD TO GO

User Manual

ELECTRIC
AIR DUSTER | F3




SUPERSAFE is a safety protection technology by GOOLOO

Model No.: X201

Contents

English	02~19
Deutsch	02~19
Español	02~19


PRODUCT OVERVIEW

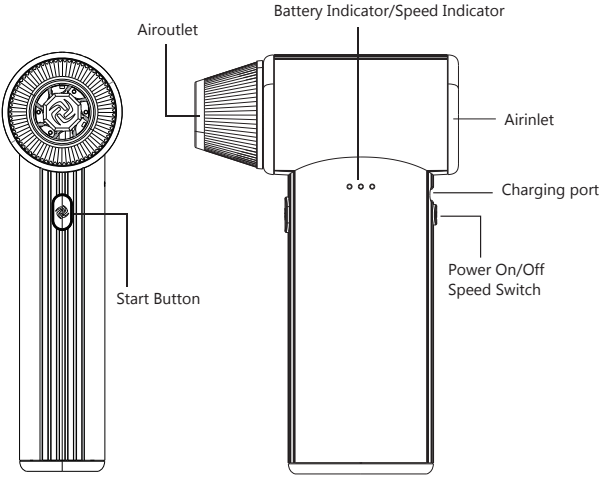

PRODUCTLIST



 Device



BlowingCover



Cable

EN: INSTRUCTION

1. POWER ON/OFF

Long press the power button to turn the machine on and off, and enter standby mode after turning it on.

2. START BLOWING

Manual mode: Press and hold the start button to start the device blowing, and release the start button to stop (third gear).

Automatic mode: Click the motor to rotate, click to stop rotation, click to start only the first and second gears, and cannot start the third gear.

3. GEAR SHIFT

After turning on, click the power button to switch gears in sequence (default to three gears when turning on).

-First gear: Soft wind

-Second gear: Violent wind

-Third gear: Super violent wind

4.CHARGING

The product supports fast charging chargers but is not allowed to be charging during using.

5. BATTERY INDICATOR LIGHT

Charging: The indicator lights flash sequentially (based on the battery level)

Full charge: all 3 indicator lights are on

Low battery: 3 indicator lights flashing

Battery: 3 lights on 100%, 2 lights on 66%, 1 lights on 33%

6. INTELLIGENT PROTECTION FUNCTION

The product will automatically shut down when there is no operation after 3 minutes of standby.

PRODUCT PARAMETERS

Product Name	F3 ELECTRIC AIR DUSTER
Model No	X201
Motor	150000RPM
Battery Capacity	2500mAh
Working Voltage	7.4V
Theoretical Endurance	4 h (first gear)
Product Size	132.7*83.4*38mm
Product Weight	205g
Wind Pressure	200g

PRODUCT PARAMETERS

GEAR SELECTION	RPM	WIND SPEED(m/s)
First Gear	25000	17
Second Gear	70000	30
Third Gear	150000	52

NOTE:

1. Do not use with wet hands.
2. Do not put the product in splashing or soaking environment.
3. Do not block the air inlet and air blower when the product is working.
4. Do not insert foreign objects into air vents and air intakes.
5. Prohibit direct eye contact with LED.
6. Do not place the product near a heat source (stove or heater, etc.) or in a car on a hot day.
7. Do not use near LPG or other flammable products (e.g. volatilizers, paint thinners, sprays, etc.), which may cause explosion or fire.
8. It is strictly prohibited to fall or collide, which may cause damage and lead to abnormal work. If it cannot be used normally, please contact the after-sales service in time.
9. Do not pull, twist, squeeze or modify the charging cable. If the charging cable is abnormal or damaged, please stop using the charging cable immediately.
10. In case of abnormal sound, odor, high temperature, or abnormal rotation of the fan blade, please stop using the product immediately.
11. Do not disassemble the whole machine. If the machine is not properly disassembled, please contact the after-sales service and send it back.

USE AND STORAGE:

1. The air out of this product is cold air. When using, please keep your hair away from the air dryer and air inlet to avoid hair inhalation.
2. Store in a well-ventilated, dry place, avoid direct sunlight and do not exceed the recommended temperature of -20°C to 60°C.
3. Do not blow air to the eyes, ears, mouth and other human organs during use.
4. Do not inhale solid particles larger than 1mm during use, so as not to damage the fan blade.
5. Do not use the product in an environment with too high or low temperature.
6. Do not store the product in the reach of children and pets.
7. Do not leave the product while using it.
8. Do not use the product in humid and splashing environments (such as near the bathtub, shower room, wash basin or other water containers).

REPAIR AND MAINTENANCE:

1. Keep this product out of reach of children and pets.
2. Please store in a dry environment.
3. Do not overcharge or overdischarge the battery, otherwise it will cause damage to the cell.
4. Please remove the accessories on the air outlet and air inlet regularly.
5. Do not press or rub the air inlet and air outlet with nails or sharp objects to avoid damaging the product.
6. This product is not waterproof, do not use alcohol, nail polish or cleaner to clean this product, otherwise it may cause malfunction, cracking or discoloring.

CHARGING CABLE USE AND PRECAUTIONS:

1. Do not use the charging cable when it is damaged or hot, otherwise it may cause burns, electric shock or fire due to short circuit.
2. Do not plug and remove the charging cable with wet hands, otherwise it may cause electric shock and personal injury.
3. If the charging cable is damaged, be sure to replace it to avoid danger.

PRECAUTIONS WHEN THE PRODUCT IS DISCARDED:

The batteries used in this product are recyclable and renewable resources. Please give it to a professional organization that can recycle and regenerate the rechargeable battery when it is discarded. The battery must be removed from the appliance before disposal; The appliance must be powered off when the battery is removed; Batteries should be safely disposed of.

Take steps to:

1. Pry open the switch cover plate with professional tools;
2. Pull out the battery lead terminal from the motherboard;
3. Cut the shell with professional iron scissors and remove the battery.

NOTES:

If there is any abnormality or malfunction, such as: no wind, frequent stop, internal redness, smoke coming out, please stop using the product immediately, the use of this product under such circumstances may cause personal injury or fire due to short circuit.

NOTE:

The illustrations of products and accessories in this manual are schematic diagrams for reference only. Due to product updates and upgrades, the actual product may differ slightly from the schematic, please refer to the actual product. To reduce the risk of failure, electric shock, injury, fire, death, and damage to equipment or property, please observe the above safety precautions.

YOUR WARRANTY INCLUDES

•18 Months Online After- Sales Service

Within 18 months, we will provide timely and effective online after- sales service after your purchase.

•30 Days Money Back Guarantee

Within the first 30 days after your purchase, you can apply return for it through Amazon when you have any issue.

•30 Days to 18 Months

We will replace the defective unit due to manufacturing issues with a new one within 18 months.

DISCLAIMER

A. The warranty is valid upon presentation of the original receipt (Order ID)by the original purchaser with the product need to be repaired or replaced.

B. The warranty does not cover damage or product failure resulting from normal wear and tear, physical abuse,improper installation, misuse, modification or repairs by unauthorized third parties.

C. We are not liable for any incidental or consequential damage that arises from incorrect use or misuse of this product.

D. All warranty claims are limited to repair or replacement of the defective product and at the sole discretion of GOOLOO.

CUSTOMER SERVICE



18 Months Limited Warranty Service



Lifetime Technical Service



Feel Free to Contact Us

fiona@gooloo.com(US Recommend)
support.eu@gooloo.com(EU Recommend)



For FAQ and More Information
www.gooloo.com



1-888-886-1805
Mon.-Fri. PST 9:00a.m.-5:00p.m.



@gooloofans



@GoolooOfficial

GOOLOO[®]

**Thank You
for Choosing Us**



Made in China